

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://heimeier.nt-rt.ru> || hri@nt-rt.ru

TA-Therm-D



Circulation valves
Thermostatic circulation valve

Engineering
GREAT Solutions

TA-Therm-D

This thermostatic valve for automatic balancing in domestic hot water systems features a step-less temperature setting, saving energy with reduced delay time for hot water. The shut-off function enables straightforward maintenance while the temperature control feature delivers safer operating procedures.

Key features

- > **Thermometer**
For easy maintenance.
- > **Measuring point**
For easy maintenance and temperature measuring.
- > **AMETAL®**
Dezincification resistant alloy that guarantees a longer valve lifetime and lowers the risk of leakage.
- > **Special surface treatment**
Ideal for high demanding domestic water applications.



Technical description

Application:

Domestic hot water systems.

Functions:

Stepless temperature setting
Shut-off
Temperature control

Dimensions:

DN 15-20

Pressure class:

PN 16

Static pressure:

Max. static pressure during temperature control 10 bar.

Temperature:

Max. working temperature: 90°C

Temperature range:

35-80°C
Pre-set at 50 or 55°C.
Kv at pre-set temperature: 0,3

Material:

Valve plug: Corrosion-resistant acetal plastic.
Seat: Corrosion-resistant polysulphone plastic
Handwheel: Glassfibre reinforced polyamide plastic
Other parts in contact with water of AMETAL®
O-rings: EPDM rubber

AMETAL® is the dezincification resistant alloy of IMI Hydronic Engineering.

Surface treatment:

Valve body completely coated with T.E.A. (TERNARY ECO ALLOY) PLUS®
T.E.A. is a registered trademark of La Tecnogalvano.

Marking:

Valve body: TA, PN 16, DN, DR, flow direction arrow.

Approvals:

Approved for tap water systems by RISE (Research Institutes of Sweden).

General

Today, most of the larger buildings have domestic hot water circulating systems in order to reduce the delay time for the water to run hot at the taps.

A TA-Therm thermostatic circulation valve can be fitted instead of a conventional balancing valve.

The valve opens when the temperature of the domestic hot water upstream of the valve is lower than the set temperature and when the supply temperature exceeds the set temperature,

the valve closes. The flow of domestic hot water stops until the temperature of the water in the pipe has fallen below the set value, then the valve re-opens and again allows hot water to circulate.

TA-Therm is fitted with a manual shut-off valve in order to allow repair work to be carried out on the system.

The measuring point is self-sealed. When measuring, remove the cap and insert the probe through the seal.

Sizing

The flow requirement in a hot water circulation system is determined by the cooling of the water in the distribution pipes. It is desirable to keep this temperature drop under control, and normally it is recommended a temperature drop of 5-10°C from the hot water tank or boiler etc. to the TA-Therm.

In modern buildings, the heat loss from insulated pipes that will carry the circulating hot water can be estimated to about 10 W/m.


From this, the necessary flow rate of the circulation pump can be calculated:

$$q = 10 \times \sum L \times 0,86 / \Delta T \text{ (q in l/h)}$$


The pump head needs to be sufficient to overcome friction and pressure pulse losses in the pipes to the furthest hot water circulation valve and back, to which must be added the pressure drop across the TA-Therm valve itself, check valve, heat exchanger and other components.

NB!

The output temperature from the hot water tank, boiler etc. must be at least 5°C above the temperature setting of the TA-Therm.

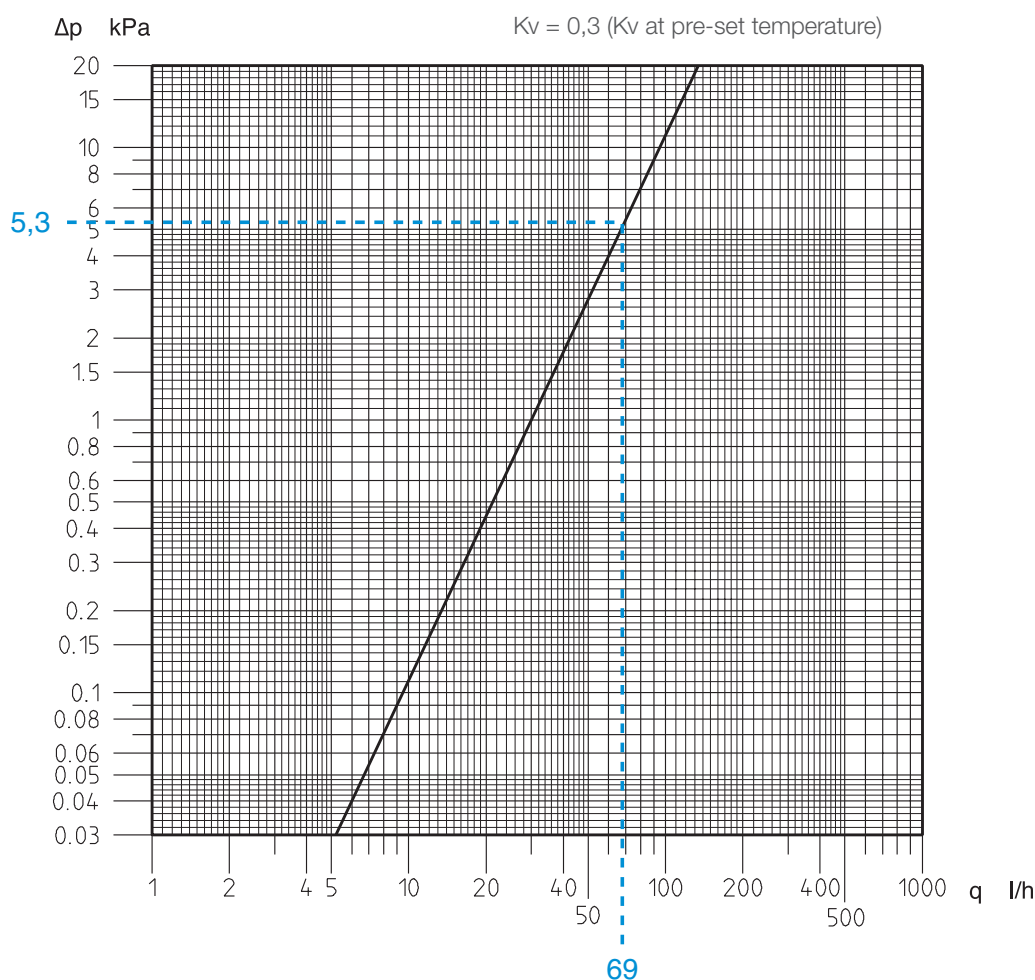

Example

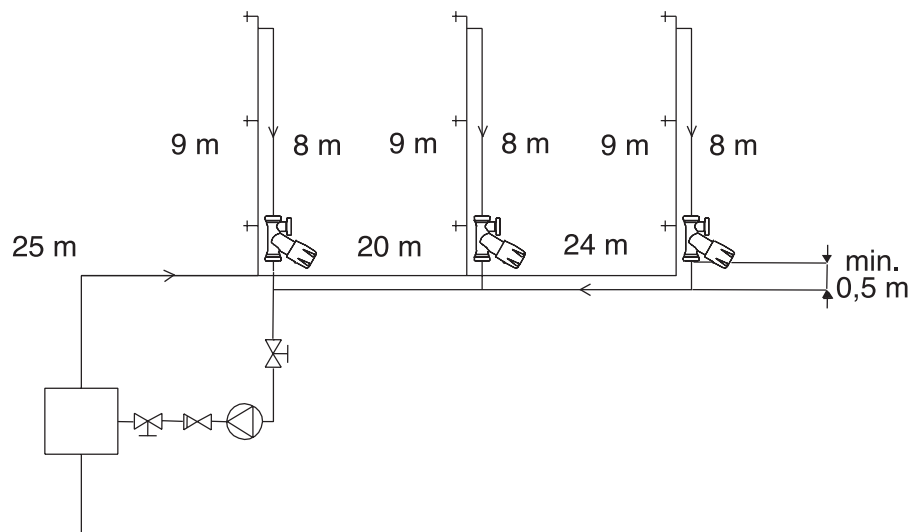

Solution:

Necessary flow to overcome 5°C temperature drop to the last TA-Therm:

$$q = 10 \times (25+9+8+20+9+8+24+9+8) \times 0,86 / 5 = 206 \text{ l/h}$$

Assume that the total flow is divided equally for each TA-Therm. $206/3 = 69 \text{ l/h}$, which gives a pressure drop of 5,3 kPa for DN 15 (see diagram).

The required pump head is then given by:

1. TA-Therm = 5,3 kPa

2. The pressure drop in the hot water pipes to the last tap is estimated to 30 Pa/m (at low load).

$$30 \times (25+20+24+9) = 2300 \text{ Pa} = 2,3 \text{ kPa}$$

3. The pressure drop in the hot water circulation pipe (from the last tap and back) is estimated to 100 Pa/m.

$$100 \times (8+24+20+25) = 7700 \text{ Pa} = 7,7 \text{ kPa}$$

4. The pressure drop in the check valve, heat exchanger and other components is estimated to 12 kPa.

$$\sum \Delta p = 5,3+2,3+7,7+12 = 27,3 \text{ kPa}$$

Select a pump to give 206 l/h at a minimum of 28 kPa head.

Installation

TA-Therm is calibrated and pre-set at 50 or 55°C.
TA-Therm can be set at any required temperature between 35-80°C.

Installation

(see Diagram B)

Fit TA-Therm in each circulation riser, either at the top or bottom of the riser.

Make sure that the valve is fitted the right way round (an arrow on the valve body indicates the direction of flow) and not closer than 0,5 m from the return pipe.

Temperature setting

(see Diagram A)

- Loosen the locking screw with the 2.5 mm Allen key, and unscrew it until it projects slightly above the handwheel.
- Turn the handwheel anticlockwise to stop.
- Set the required temperature against the casting line along the centre of the valve body (see the dotted line).
- Tighten the locking screw.

Shut-off

(see Diagram A)

- Loosen the locking screw with the 2.5 mm Allen key, and unscrew it until it projects slightly above the handwheel.
- Turn the handwheel clockwise to stop.

Resetting the temperature

(see Diagram A)

- Turn the handwheel anticlockwise to stop.
- Set the required temperature against the casting line along the centre of the valve body (see the dotted line).
- Tighten the locking screw.

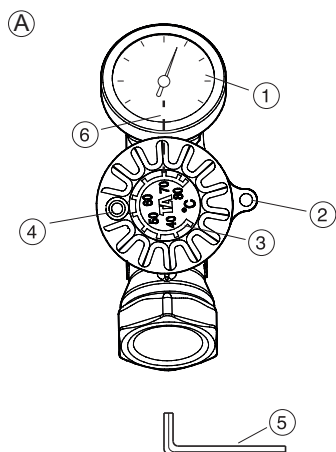


Diagram A

1. Temperature gauge
2. Lug for identification tab
3. Temperature scale
4. Locking screw
5. Allen key for locking screw (2.5 mm)
6. Casting line


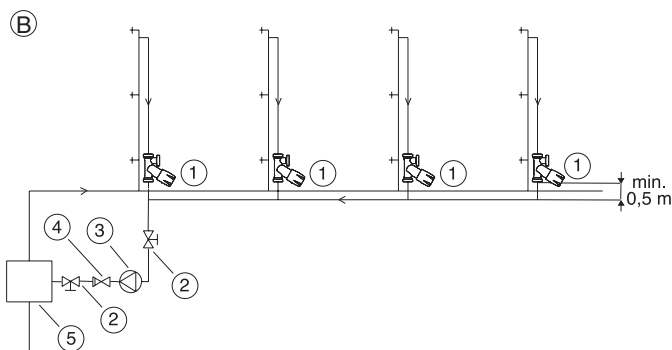


Diagram B

1. TA-Therm
2. Shut-off valve
3. Domestic hot water circulation pump
4. Check valve
5. Heat exchanger

TA-Therm-D – 35-80°C

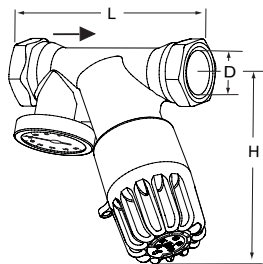

With thermometer

Pre-set at 50°C


DN	D	L	H*	Kv _{nom}	Kvs	EAN	Article No
15	G1/2	86	90	0,30	1,1	5902276895661	344020-10411
20	G3/4	92	90	0,30	1,1	5902276895739	344020-10508

Pre-set at 55°C

DN	D	L	H*	Kv _{nom}	Kvs	EAN	Article No
15	G1/2	86	90	0,30	1,1	5902276895647	344020-10409
20	G3/4	92	90	0,30	1,1	5902276895715	344020-10506

TA-Therm is prepared for the compression coupling KOMBI. See catalogue leaflet KOMBI.

Accessories

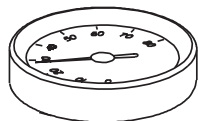

Thermometer
0-100°C

ØD	EAN	Article No
41	7318792567308	50 205-002

Алматы (7273)495-231
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +7(7172)727-132

Киргизия +996(312)96-26-47

<https://heimeier.nt-rt.ru> || hri@nt-rt.ru